

## SG1-0040 - Fleet Door Lock Installation

Loosen and remove the (4) PC-000162 Screws and (2) PC-000163 Screws from the Door Trim Panel and Door Panel Cover.

Knock-out the plastic filling the key hole (as shown).

Remove the nut from the end of the lock and insert the SG1-0040 - Lock through the hole from the outside. Reinsert the nut back on the lock and tighten down.

 
Insert the key and turn the lock to the right and remove the key (this is the locked position which is needed at this point to check the lock for proper installation with the Slide Latch mechanism).

**NOTE:** Turning the key upright is the neutral or normal use position which allows the Slide Latch to move into the "Open/In-Use" position when persons are inside the restroom. Turning the key to the left is the open position and the key can not be removed until either in the "Open/In-Use" or "Locked" position.


Reinstall the Slide Latch/Cover Plate mechanism (as shown).

Align the door panel cover to the door and insert the (4) PC-000162 screws and tighten. **NOTE:** These screws should be tightened to the point where they will interfere with the sliding action of the Slide Latch and then backed off slightly, leaving enough friction to prevent the Slide Latch from sliding into the "In-Use/Open" position when the door shuts. The U Shaped handle prevents persons from inadvertently moving the slide latch to the "In-Use" position when exiting the restroom.

Refasten the door trim panel to the door with with the (2) PC-000163 Screws. Unlock the lock.



 (2) PC-000163 Screw



(4) PC-000162 Screw

