



# Fleet Series™ Convenience Shelf

## General Overview

The SG1-0015P - Fleet Series Convenience Shelf is an optional shelf available in pewter grey for the Fleet Series Portable Restroom. Designed to fit around the vent stack as a convenient out of the way shelf with an SU01-0002 Coat Hook. Shipped along with the SU02-0200 - Small Parts Kit that contains all the accessories necessary for mounting.



## Specifications

Length	21 in	53.34 cm
Width	12 in	30.48 cm
Depth	1.813 in	4.61 cm
Weight	16 oz	0.45 kg

### POLYJOHN USA

PolyJohn Enterprises Corp  
2500 Gaspar Ave.  
Whiting, IN 46394  
Phone: 800-292-1305  
Fax: 219-659-0625  
www.polyjohn.com  
info@polyjohn.com


### POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.  
Equinox 1 Audby Lane  
Wetherby, England LS22 7RD  
Phone: 44 (0) 1937-583333  
Fax: 44 (0) 1937-583322  
sales@polyjohn.co.uk

### POLYJOHN CANADA

PolyJohn Canada  
P.O. Box 2300  
199 Forest Plain Rd.  
Orillia, Ontario LV3 6S2  
Phone: 800-465-9590  
Fax: 705-325-8250  
info@polyjohncanada.ca

## Full Size Scale Fasteners

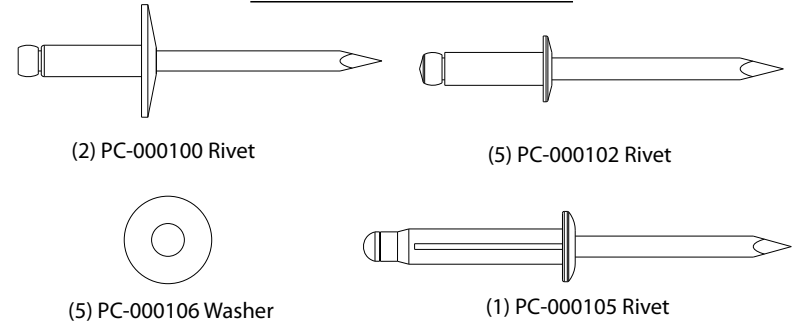

## ~~Tools Required~~

• Drill • 13/64" Bit • Rivet Gun

## Installation

**NOTE:** The Fleet Series Convenience Shelf Installation will require two people.

**Step 1:** Using a 13/64" bit, drill holes into the six dimple spots along the inner edges of the shelf.

**Step 2:** Place the shelf against the vent stack in between the top two ribs of the left side wall panel and against the rear wall panel. Using the shelf as a guide, with a 13/64" bit, drill through the six holes of the shelf and into the left and rear wall panels and into the vent stack.

**Step 3:** From outside of the unit rivet into the holes just drilled using (5) PC-000102 rivets, with (5) PC-000106 backup washers on the inside. At the vent stack location from inside rivet (1) PC-000105 rivet into the pre-drilled hole of the shelf into the vent stack.

**Step 4:** Position the SU01-0002 Coat Hook on top of the shelf, centered to the left of the vent stack (*as shown*). Using the coat hook as a guide, drill two 13/64" holes into the shelf.

**Step 5:** Position the SU01-0002 Coat Hook underneath the shelf and rivet into place from the topside with (2) PC-000100 rivets.

