



PJIII™ Series Convenience Shelf

General Overview

The SU01-0001P - PJIII Convenience Shelf is an optional shelf available in pewter grey for the PJIII Series Portable Restroom. Designed to fit around the vent stack as a convenient out of the way shelf with an SU01-0002 Coat Hook. Shipped along with the SU01-0200 - Small Parts Kit that contains all the accessories necessary for mounting.



Specifications

Length	19.5 in	49.53 cm
Width	7 in	17.78 cm
Depth	1.625 in	4.13 cm
Weight	16 oz	0.45 kg

POLYJOHN USA

PolyJohn Enterprises Corp
2500 Gaspar Ave.
Whiting, IN 46394
Phone: 800-292-1305
Fax: 219-659-0625
www.polyjohn.com
info@polyjohn.com


POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.
Equinox 1 Audby Lane
Wetherby, England LS22 7RD
Phone: 44 (0) 1937-583333
Fax: 44 (0) 1937-583322
sales@polyjohn.co.uk

POLYJOHN CANADA

PolyJohn Canada
P.O. Box 2300
199 Forest Plain Rd.
Orillia, Ontario LV3 6S2
Phone: 800-465-9590
Fax: 705-325-8250
info@polyjohncanada.ca


Full Size Scale Fasteners

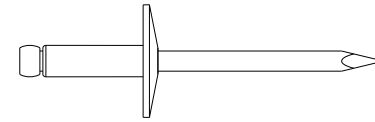

(6) PC-000100 Rivet



(4) PC-000106 Washer



(1) PC-000105 Rivet

~~Tools Required~~

• Drill • 13/64" Bit • Rivet Gun

Installation

NOTE: The PJIII Series Convenience Shelf Installation will require two people.

Step 1: Inside the unit position the shelf against the vent stack directly below the fly screens (*along the top edge of the ribs on both the left and rear wall panels*). Using a 13/64" bit, drill through the four pre-drilled holes located along the sides of the shelf into the left and rear wall panels.

Step 2: From outside the unit rivet into the holes just drilled using (4) PC-000100 rivets with (4) PC-000106 backup washers on the inside.

Step 3: Using a 13/64" bit, inside the unit drill a hole through the shelf and into the vent stack (*in the center underneath where the shelf hugs the vent stack*). Rivet the shelf into the vent stack using (1) PC-000105 rivet.

Step 4: Position the SU01-0002 Coat Hook underneath the shelf (*at the location of the two pre-drilled holes just in front of the vent stack*) and rivet into place from the topside with (2) PC-000100 rivets.

