




# SAN1-1000 SaniStand™ Hand Wipes Dispenser Assembly Instructions

## General Overview

The SAN1-1000 - SaniStand™ Hand Wipes Dispenser is designed for use where hand washing is not available such as festivals, food service locations, petting zoos, construction sites, etc., to be used indoors or out. The base can be filled with water or sand to provide additional stability.

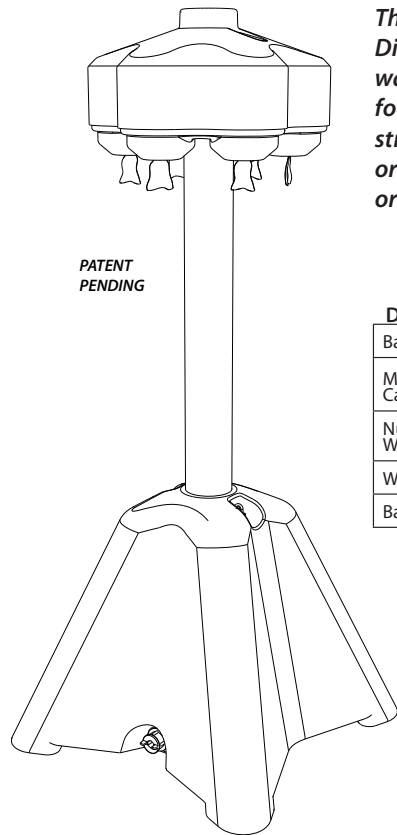


## Specifications

Dimension	Imperial	Metric
Base/Holder/Lid/Pipe	28"x28"x66"	71x 71x168 cm
Maximum Hand Wipes Canister Capacity	6/220 count	
Number of Single Wipe Dispenses	1320-6/220 count 6"x7.5" individual wipe size	
Weight Empty	27.5 lb	12.5 kg
Base Capacity	23 gal	87.1 ltr

## ~~Assembly Tools Required~~

- Drill with a Phillips Bit  
or a Phillips Head Screwdriver

## Full Scale Fastener Drawing



(2) PC-000158  
Self-Tapping Screw

## Assembly Instructions

- Step 1.** Insert the SAN1-0005 - Dispensing Pipe into the SAN1-0001G - Base.
- Step 2.** Line up the pre-drilled holes of the base and dispensing pipe. Insert a PC-000762 - Locking Rod through the holes of the base and dispensing pipe and push through to the other side. Place a PC-000205M - Lock onto the locking rod and secure in place.
- Step 3.** Insert a locking rod through the top hole of the pipe and push through to the other side. Place a lock onto the locking rod and secure. Place the SAN1-0002G - Holder/Lid Dispensing Container onto the dispensing pipe (*making sure the groove on the bottom side of the container is resting on the locking rod.*)
- Step 4.** While pushing down on the top of the dispenser, drive (2) PC-000158 Self-Tapping Screws through the two drill spots located on the lid and through the dispensing pipe.

## General Use and Information

### Filling the Base:

To fill the base with water or sand (*in order to create enough ballast to keep from being tipped over*), unlock the lock from the base and remove the lock, locking rod and dispensing pipe. Fill with either water or sand and reinsert the dispensing pipe, locking rod and lock.

**Note:** When filling with sand, make sure to tilt the base on its side to keep the bottom raised area free from sand for proper installation of the dispensing pipe into the base.

### Draining the Base:

To drain the base if filled with water, simply loosen the PC-000554 Plug located at bottom of the base. Hand tighten the plug when finished draining. If filled with sand, unlock the lock, remove the lock and locking rod and pull out the dispensing pipe. Turn the base upside down and empty. Reinsert the dispensing pipe, locking rod and lock when empty.

### Filling the Dispenser:

To fill the dispenser, unlock the lock from underneath the Holder/Lid Dispensing Container and remove the lock and locking rod.

**Note:** The force of the weight of the wipes canisters being full will enable the bottom of the Holder/Lid Dispensing Container to pull down almost by itself. When empty you will have to pull down with some effort.

Remove the lids from the SAN1-0220 - Sani-Hands® II Wipes, and discard the seals. Thread the first wipe through the hole of the lid (*follow the instructions on the wipes canister label*). Place the lids back on the canisters and leave the caps open. Place the canisters upside down into the holder with the caps facing the dispensing pipe. Push the holder up into the lid (*make sure the groove on the bottom side of the holder lines up with the pre-drilled holes in the pipe*).

Insert the locking rod through the hole of the dispensing pipe underneath the Holder/Lid and push through to the other side and secure the lock.

**Note:** It is suggested to close the caps of the wipes canisters if they will not be in use for a prolonged period of time.

### POLYJOHN USA

PolyJohn Enterprises Corp  
2500 Gaspar Ave.  
Whiting, IN 46394  
Phone: 800-292-1305  
Fax: 219-659-0625  
www.polyjohn.com  
info@polyjohn.com

### POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.  
Equinox 1 Audby Lane  
Wetherby, England LS22 7RD  
Phone: 44 (0) 1937-583333  
Fax: 44 (0) 1937-583322  
sales@polyjohn.co.uk

### POLYJOHN CANADA

PolyJohn Canada  
P.O. Box 2300  
199 Forest Plain Rd.  
Orillia, Ontario L3V 6S2  
Phone: 800-465-9590  
Fax: 705-325-8250  
info@polyjohncanada.ca