

# ADA COMPLIANT SANISTAND™

## PRODUCT INSTRUCTIONS




**POLYJOHN®**  
there when you need us



**NOTE:** We recommend reading through the entire Assembly Instructions prior to proceeding with use, service or maintenance.

# PRODUCT SPECIFICATIONS

ADA COMPLIANT SANISTAND™  
SAN1-2100

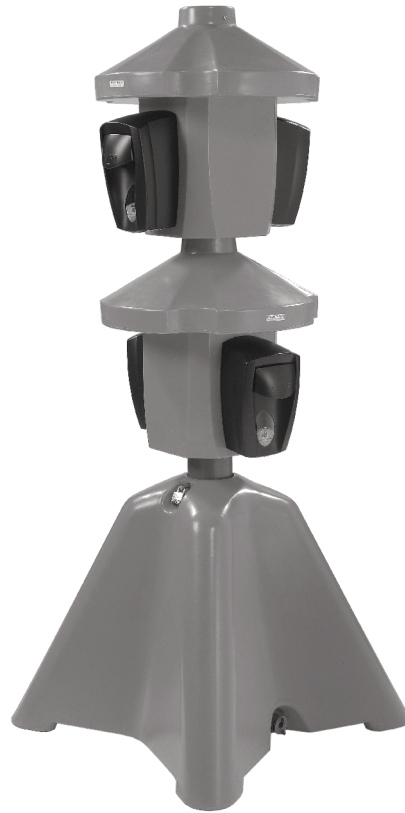

DIMENSION	IMPERIAL	METRIC
Base/Top/Dispensing Pipe		71x71x168 cm
Maximum Hand Foam Dispenses	135 fl oz (4-1000 ml refill bags)	
Number of Single Foam Dispenses	5,333 (4000-.75 ml dispenses)	
Weight Empty w/Dispensers	36 lb	16.3 kg

**NOTE:** All dimensions are subject to change due to environmental factors. All materials, including resin, pigments and additives used to make the plastic components as well as the plumbing components that come in contact with the fresh water are U.S. FDA food grade compliant.

# PRODUCT OVERVIEW

ADA COMPLIANT SANISTAND™  
SANI-2100

## ADA COMPLIANT

The SANI-2100 - SaniStand™ Double Hand Foam Dispenser is designed for use where hand washing is not available such as festivals, food service locations, petting zoos, construction sites, etc., to be used indoors or out. The base can be filled with water or sand to provide additional stability.

---


## TOOLS REQUIRED FOR ASSEMBLY




Drill



1/4" Drill Bit

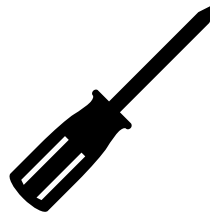

Phillips Screwdriver



(4) PC-000158  
Self-Tapping Screws

# ASSEMBLY INSTRUCTIONS

ADA COMPLIANT SANISTAND™

SAN1-2100

**NOTE:** All drilling will require a 13/64" bit. \* = Specify Color Option

Step 1. Insert the SAN1-0005 - Dispensing Pipe into the SAN1-0001G - Base.

Step 2. Line up the pre-drilled holes of the base and dispensing pipe. Insert a PC-000762 - Locking Rod through the holes of the base and dispensing pipe and push through to the other side. Place a PC-000205M - Lock onto the locking rod and secure in place.

**NOTE:** The suggested positioning of the Dispenser Holders would be with the Foam Dispensers in opposition of each other (the top two dispensers opposite the bottom two dispensers).

Step 3. Place the SAN1-0004\*BC - Bottom Foam Dispenser Holder (the holder with a hole through the center) onto the dispensing pipe, lining up the corners of the holder with the corners of the base.

Step 4. Place the SAN1-0004\*TC - Top Foam Dispenser Holder onto the dispensing pipe, (the holder with a center hole at the bottom) lining up the corners of the holder with the corners of the base (making sure that it fits snugly on the pipe).

Step 5. While pushing down on the top of the holder, drive (2) PC-000158 Self-Tapping Screws through the two drill spots located along the top of the holder and through the dispensing pipe.

Step 6. Pull the bottom holder up so that it fits up against the bottom of the top holder (with the foam dispensers opposite as suggested). Drive (2) PC-000158 Self-Tapping Screws through the two drill spots located along the top of the holder and through the dispensing pipe.

## GENERAL USE AND INFORMATION

### FILLING A DISPENSER:

To fill a dispenser, push up on the tab from underneath the dispenser and pull down the cover. Fill with Foam Hand Sanitizer (follow the instructions located on the sticker inside of the foam dispenser). *Order Part #FD1-0004 for a case of 4 refills. If this product is being used in a cold environment such as a winter event, please order part # FD1-0004W. This is a case of 4 winter blend refills.*

### FILLING THE BASE:

To fill the base with water or sand (in order to create enough ballast to keep from being tipped over), unlock the lock from the base and remove the lock, locking rod and dispensing pipe. Fill with either water or sand and reinsert the dispensing pipe, locking rod and lock.


**NOTE:** When filling with sand, make sure to tilt the base on its side to keep the bottom raised area free from sand for proper re-installation of the dispensing pipe into the base.

### DRAINING THE BASE:

To drain the base if filled with water, simply loosen the PC-000554 Plug located at the bottom of the base. Hand tighten the plug when finished draining. If filled with sand, unlock the lock, remove the lock and locking rod and pull out the dispensing pipe. Turn the base upside down and empty. Reinsert the dispensing pipe, locking rod and lock when empty.

# PARTS DIAGRAM EXPLODED VIEW

ADA COMPLIANT SANISTAND™  
SAN1-2100

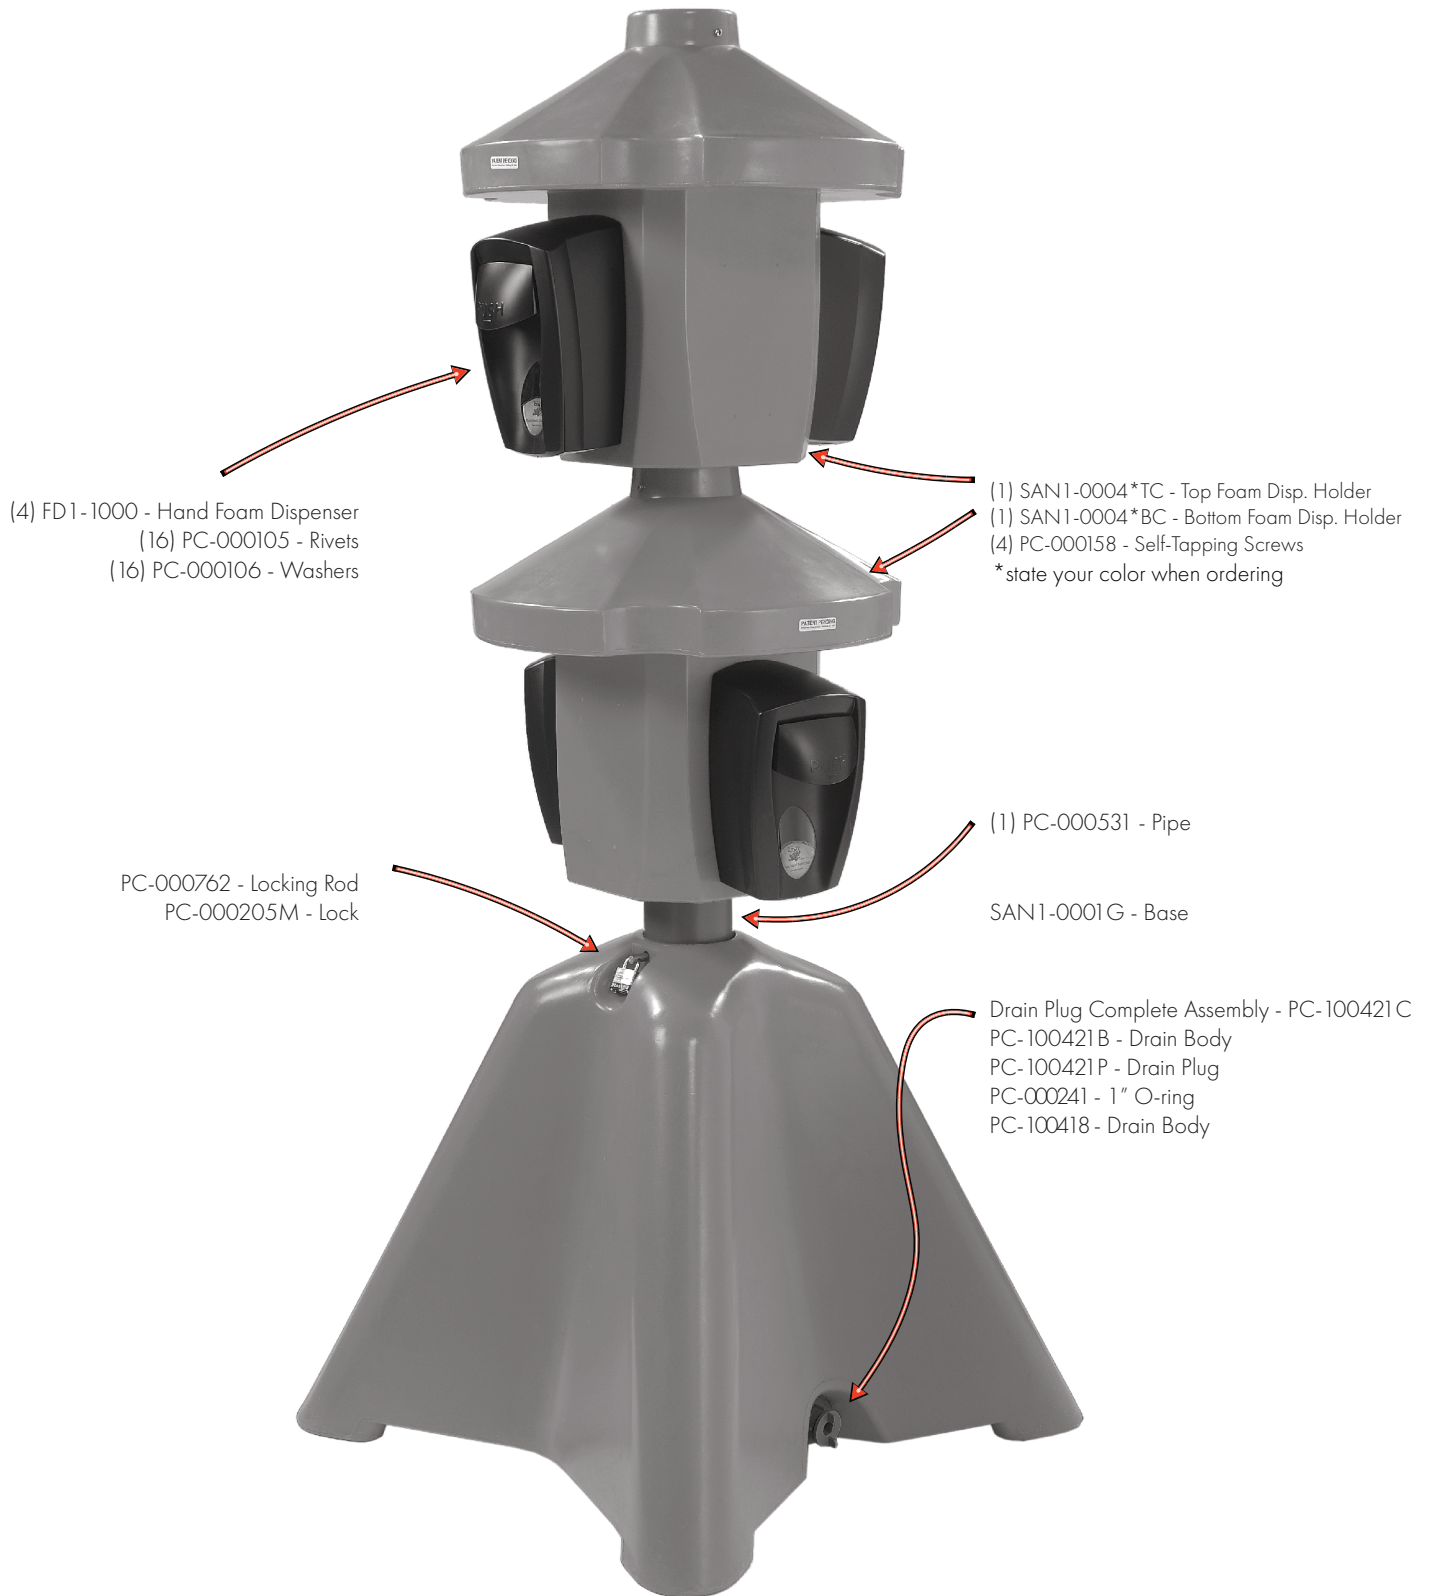

# OPTIONAL ACCESSORIES, SUPPLIES AND CHEMICALS

ADA COMPLIANT SANISTAND™  
SAN1-2100



Foam Hand Sanitizer Dispenser  
FD1-1000



Foam Hand Sanitizer Refills  
FD1-0004



Winter Foam Hand Sanitizer Refills  
FD1-0004W

---

## CLEANING AND MAINTENANCE

Use a mild soap to clean all surfaces and component parts.

Minor scratches and abrasions can be lightly sanded or scrubbed with a mild abrasive cleaner (such as "Soft Scrub") that contains calcium carbonate, hypochlorate bleach, and detergents. Be sure to follow the cleaning product directions since these ingredients may cause hazardous gases when mixed with other chemicals. Rinse the cleaned areas and buff with a conventional wax.

Some light scratches may also be hidden by using an industrial hot air gun.

For a source of cleaning, deodorizing and paper products contact:

**PRO'S CHOICE**  
**2500 GASPAR AVE.**  
**WHITING, IN 46394-2175**  
**800-292-1305**  
**[www.polyjohn.com/products/supplies/pros-choice.html](http://www.polyjohn.com/products/supplies/pros-choice.html)**

We highly recommend membership in the Portable Sanitation Association International (PSAI); the worldwide authority on portable sanitation services. The PSAI, "Portable Sanitation Industry Certification Program" manual contains a wealth of information on standards and service procedures. For more information contact the PSAI:

**PORTABLE SANITATION ASSOCIATION INTERNATIONAL (PSAI)**  
**7800 METRO PARKWAY, SUITE 104**  
**BLOOMINGTON, MINNESOTA 55425 USA**  
**800-822-3020 / 612-854-8300 FAX 612-854-7560**  
**[www.psa.org](http://www.psa.org)**


## Prop 65

PolyJohn Corporation would like to inform any customers or end users that some products may contain chemicals listed in California's Safe Drinking Water & Toxic Enforcement Act of 1986. Commonly referred to as Proposition 65, this Act establishes a list of chemicals known by the State of California to present a risk of cancer, birth defects, or other reproductive harm.


Chemical exposure typically occurs through inhalation, ingestion, or adsorption. PolyJohn products are not intended to be used in these methods. PolyJohn Corporation cannot foresee all uses of their products (both intended and unintended uses) and as a result has opted to provide a general warning of known chemical presence.

The Proposition 65 chemical list can be found at <http://www.P65Warnings.ca.gov>

The following warnings are labels placed on affected products. If these labels are not present then they do not apply to that product.

 **WARNING:** This product can expose you to chemicals including 4-Vinylcyclohexene which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

*4-Vinylcyclohexene label above to be used any product made with Bayblend T85*

 **WARNING:** This product can expose you to chemicals including titanium dioxide, which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## Conflict Minerals Compliance Statement

Section 1502 of the Dodd-Frank Wall Street Reform and Consumer Protection Act, and the Securities and Exchange Commission Rules adopted in connection therewith, require certain corporations to report the use of "Conflict Minerals" in the manufacture of their products. Generally, Conflict Minerals collectively refers to cassiterite, columbite-tantalite, gold, wolframite, or their derivatives, including tantalum, tin and tungsten, which originate from the Democratic Republic of the Congo or specified adjoining countries (referred to herein as "Covered Countries").

While we, as a privately held corporation, are not subject to the Conflict Minerals rules and reporting requirements, we understand that our customers may be, and we are committed to helping our customers comply with their reporting requirements. In order to determine if our manufactured products contain Conflict Minerals, we have asked our relevant suppliers, as of September 1, 2020, to ascertain their use of any Conflict Minerals in the materials they supply to us. Their responses demonstrate that our relevant suppliers (i) do not use Conflict Minerals in the materials they supply to us, (ii) have no reason to believe the Conflict Minerals they use may have originated in the Covered Countries, and/or (iii) reasonably believe that the Conflict Minerals they use are from recycled or scrap sources. Consequently, we can in turn represent that, to the best of our knowledge, our manufactured products either do not contain Conflict Minerals, or to the extent they may, such products are "DRC conflict free" as defined by paragraph (e)(4) of Section 1502.

We will continue to work with our key suppliers to ensure that we are able to identify the use of Conflict Minerals in our supply chain, and the representations made in this compliance statement remain accurate. To that end, we reserve the right to amend this statement at any time based on subsequent developments or information.

Should you have any questions or concerns regarding this statement, please do not hesitate to contact us.

# FREQUENTLY ASKED QUESTIONS

ADA COMPLIANT SANISTAND™  
SAN1-2100

## Hand Sanitizers

### **Q: How do I keep my SaniStand from tipping over?**

A: Our SaniStand, ADA SaniStand, and MiniSan sanitizer dispensers have a base that can be filled with water or sand. There is a fill port that you can put a garden hose to to fill with water or use a funnel to add sand to the base.

### **Q: What kind of dispensers can I put on the stands?**

A: We have designed our stands to accept most dispensers on the market. We offer a wide variety of dispensers that work the best, but you do have the option to add your own if desired.

### **Q: What is the large section on the top of the MiniSan dispenser for?**

A: That area is for signage. You can add a sticker to your dispenser, so people recognize its use. You can also use it for advertising or directional signs.



# WARRANTY

ADA COMPLIANT SANISTAND™

SAN1-2100

## RESTROOMS AND TOILETS

### POLYJOHN PORTABLE RESTROOMS LIMITED 3 YEAR PRODUCT WARRANTY

PolyJohn Enterprises Corp. warrants the major plastic parts of its portable restrooms (plastic front, wall panels, roof, and tank) against any breakage or other problems that prevent the PolyJohn portable toilet from functioning in accordance with usual practices used in the portable toilet industry and in their intended manner. This warranty covers any damages in material or workmanship for a total period of 3 years (36 months). This warranty extends only to the original purchaser of the PolyJohn portable restroom. Proof of purchase, serial numbers, and photos will be required.

## SINKS, TANKS, TRAILERS AND SANISTANDS

PolyJohn Enterprises warrants our sinks, tanks, trailers and sanistands from the date of purchase. Any misuse or abuse of our products or failure to properly follow recommended procedures shall void this warranty. The warranty is a 1 year limited warranty and a 90 day limited warranty for components thereof.

### What is Not Covered By Warranty

This warranty does not cover damage or failure contributed to or caused by: Not following PolyJohn assembly procedures, unauthorized modification, acts of God, mishandling, misuse, use of incompatible solvents or other damaging chemicals, vandalism or accident. In no event shall PolyJohn be liable for labor costs or for incidental or consequential damages.

For full details on PolyJohn's warranty policy, and to view instructions for submitting a claim please visit <https://www.polyjohn.com/warranty/>.

### Warranty Disclaimer

PolyJohn's terms of sale are FOB (Free on Board Shipping Point). Meaning buyer takes on responsibility once it leaves PolyJohn's shipping dock. The carrier is wholly responsible for any damage incurred during transit. Important notice: All concealed/non-notated damages must be reported within 5 business days of delivery (1st day is the day of delivery) as per the National Motor Freight Classification (NMFC) – Rule 300100 - for a damaged claim to be filed. Reporting after this time will void a claim.

In order to prevent warranty disputes follow these steps immediately when receiving your products:

Inspect the shipment immediately and insist that visible damages be indicated on your copy of the freight bill. If they are not noted on the freight bill it is very likely a claim will be denied.

Open the shipment if necessary, and inspect for any concealed damages.

If there are any damages that you cannot operate with you may refuse shipment. After you do this contact us immediately

### Filing Process for Warranty

PolyJohn reserves the right to request inspection of products for verification of defect, which may include returning some or all of the parts with shipping paid for by the purchaser. Once the items have been returned, inspected, and PolyJohn is found at fault shipping costs will be reimbursed. You may contact PolyJohn to arrange for return shipping if desired.

To file your warranty claim follow these steps:

1. Go to [polyjohn.com/warranty/](https://www.polyjohn.com/warranty/)
2. Fill out necessary contact information
3. Fill in invoice number, date of purchase, product, and product serial numbers.
4. Upload an images of affected products
5. Submit and someone will be in contact with you as soon as possible.

# OUR MISSION STATEMENT

“PolyJohn is a family owned, state of the art, plastics manufacturing company dedicated to providing its employees with a work environment committed to excellence, and its customers with innovative products, services and technology that meet or exceed their requirements.”

THANK YOU FOR PURCHASING POLYJOHN PRODUCTS!



**POLYJOHN**<sup>®</sup>  
there when you need us

---

POLYJOHN USA  
+1 800-292-1305  
Whiting, Indiana  
[www.polyjohn.com](http://www.polyjohn.com)

POLYJOHN INTERNATIONAL  
UNITED KINGDOM  
+44 (0) 1937-583333  
Yorkshire, England  
[www.polyjohn.co.uk](http://www.polyjohn.co.uk)

POLYJOHN CANADA  
+1 800-465-9590  
Oro Medonte, Ontario  
[www.polyjohn.ca](http://www.polyjohn.ca)  
[www.fr.polyjohn.ca](http://www.fr.polyjohn.ca)

POLYJOHN LATIN AMERICA  
+01 800-953-1307  
Chihuahua, Mexico  
[www.polyjohn.mx](http://www.polyjohn.mx)

POLYJOHN AUSTRALIA  
+61 7 3277 5727  
Brisbane, Australia  
[www.totalsanitationsolutions.com.au](http://www.totalsanitationsolutions.com.au)

POLYJOHN SOUTHERN AFRICA  
+27 (011) 615-3804  
Johannesburg, South Africa  
[www.polyjohn.co.za](http://www.polyjohn.co.za)

POLYJOHN NEW ZEALAND  
+64 (0)22 387 7142  
Auckland, New Zealand  
[www.polyjohn.co.nz](http://www.polyjohn.co.nz)

POLYJOHN SOUTH AMERICA  
+57 318 696 7744  
Bogotá, Colombia  
[www.polyjohn.com](http://www.polyjohn.com)

POLYJOHN INTERNATIONAL  
CZECH REPUBLIC  
+420 608 876 983  
Karlovy Vary, Czech Republic  
[www.polyjohn.eu](http://www.polyjohn.eu)